

Welcome to the AGC Media Cart

Using the Media Cart

1. Unwind the large black power cord and plug it into an outlet.
2. When finished using the media cart, unplug it and wind the power cord back up. Return the cart to where you found it!

Using the Projector

1. Turn on the projector by pressing the Power button. A green indicator light will turn on but you may not immediately see a projected image since it takes about 10 minutes for the lamp to reach full intensity.
2. Adjust the focus and zoom by turning the two rings on the lens.
3. Adjust the height by turning the screw-out leg on the bottom.
4. You should not need to make any other adjustments.
5. There is a possibility that you will see a mirrored image since someone might have forgotten to reset it after using rear projection. Press the Menu button and select Settings - PROJ Mode - Front to restore the image to normal.
6. You may use the laser pointer provided on the remote marked Projector.
7. When done using the projector, press the power button twice. Wait until the fan on the projector turns off before unplugging the media cart. Return the remote to the Velcro strip on top of the projector.

Using the Computer

1. Turn on the computer and flat panel display.
2. Log in using the user name and password provided on the keyboard. Select AGCMCC domain.
3. Turn on the projector following the instructions above and select the Computer input using the input selector button on top of the projector.
4. If you will be using audio on the computer, test and set your audio levels using the instructions on the next page.
5. When done using the computer, shut down the computer before unplugging the media cart.

Using the DVD Player

1. Turn the DVD player on by pushing the power button on the front of the DVD player.
2. Insert a DVD video disc or CD audio disc.
3. Turn on the projector following the instructions above and select the S-Video Input using the input selector button on top of the projector.
4. Use the remote control labeled DVD Player to navigate the disc.
5. Test and set your audio levels using the instructions on the next page.
6. When done using the DVD player, remove the disc and turn the DVD player off by pushing the power button on the front of the DVD player. Return the remote to the Velcro strip on top of the DVD player.

Connecting Your Audio Device

You may connect an external audio device that uses a mini-plug (1/8") directly to the projector to be played through the media cart's speakers.

1. Unplug the red and the white audio cables labeled DVD Audio on the back of the projector.
2. Plug the red and white connectors of the cable provided in the media cart tray into the DVD Audio Input on the back of the projector.
3. Test and set your audio levels using the instruction below.
4. When finished using your external audio device, unplug the provided cable and return it to the tray. Plug the red and white DVD Audio cables to the DVD Audio In on the back of the projector.

Testing and Setting Audio Levels

1. Turn the speakers on by pressing the power button on the right speaker. The green light will be on when the speakers are on.
2. Turn the projector on using the instructions on the previous page.
3. Using the remote labeled Projector, adjust the volume on the projector using the volume up and down buttons. Set the projector audio level to half volume.
4. Use the volume control on the front of the left speaker to adjust the speaker and bass levels to the desired volume.
5. If using audio from the computer and you do not hear anything or it is weak, make sure the audio levels on the computer are set to max and are not muted. Go to Start – All Programs – Accessories – Entertainment – Volume Control.